GUARDIAN DEFENSE MFG.

GDM® 9 SERIES

CENTERFIRE 9 mm SUPPRESSORS

OWNER'S, MOUNTING & OPERATING INSTRUCTIONS

Silent Defense. Loud Impact.®

WARNING	**Read and understand this manual completely before installing or using any GDM® 9 Series suppressor. Improper installation, alignment, mounting, ammunition selection, or maintenance can cause suppressor damage, firearm damage, serious personal injury, or death.**

Document	Details
Document	GDM® 9 Series Owner's, Mounting & Operating Instructions
Models	GDM® 9Ti • GDM® 9TiK
Mounting	Direct Mount / Approved Piston System
Revision	Draft Rev. A
Effective Date	July 2026

1. IMPORTANT SAFETY INFORMATION

Read and understand these instructions completely before installing or using a GDM® 9 Series suppressor.

WARNING	**Follow all firearm safety rules and verify the firearm is unloaded before installation, removal, inspection, or service**

- Always treat every firearm as if it is loaded.
- Keep the firearm pointed in a safe direction.
- Remove the magazine, open the action, and physically verify the chamber is empty.
- Never install or remove a suppressor from a loaded firearm.
- Never fire through a suppressor that is loose, damaged, obstructed, or improperly aligned.
- Never use a crush washer behind a suppressor or direct mount.
- Verify projectile stability before suppressor use.
- Wear appropriate eye and hearing protection.
- Suppressors become extremely hot during firing; do not touch a hot suppressor with bare skin.

2. PRODUCT OVERVIEW

The GDM® 9 Series comprises the GDM® 9Ti and compact GDM® 9TiK. These lightweight 9 mm suppressors are intended only for compatible hosts, approved ammunition, and the mounting system appropriate to the firearm's barrel operation.

3. MODEL COMPARISON

Model	Construction	Use profile	Key distinction
GDM® 9Ti	Titanium-series construction; confirm current specification	General 9 mm pistol, PCC, and fixed-barrel use as approved	Full-size configuration for suppression and handling balance
GDM® 9TiK	Titanium-series construction; confirm current specification	Compact 9 mm host applications as approved	Shorter K configuration with reduced overall length
Mounting system	GDM-approved direct mount, spacer, or piston	Must match fixed or moving barrel operation	Incorrect mounting-system selection can damage the host or suppressor

Model, ammunition, mounting-system, barrel-length, and firing-schedule ratings must be confirmed against Guardian Defense Mfg.'s current specifications before use.

4. AMMUNITION, HOST & MOUNTING COMPATIBILITY

Use only ammunition and host configurations expressly approved by Guardian Defense Mfg. for the specific suppressor model. Compatibility is limited to the following applications:

Cartridge / chamber	Status	Required verification
9x19 mm Luger	Core application	Model, ammunition type, projectile stability, host, and firing schedule
Other 9 mm cartridges / loads	Not established by this manual	Obtain written GDM approval for the exact cartridge and load
Rifle cartridges or projectiles over approved bore size	Not approved by this manual	Do not use without explicit written GDM approval
IMPORTANT	**Bullet diameter alone does not establish compatibility. Pressure, projectile stability, barrel length, twist rate, thread geometry, ammunition quality, and suppressor model all affect safe use.**	

5. DIRECT MOUNT CONFIGURATIONS

Depending on the host and configuration ordered, the suppressor may use a GDM-approved direct mount, fixed-barrel spacer, or recoil-booster/piston system installed at the rear of the suppressor.

Muzzle & Mounting-System Selection

- Use only a GDM-approved mount or piston whose thread pitch matches the host barrel.
- Confirm whether the host requires a fixed-barrel mount, fixed-barrel spacer, or approved recoil-booster/piston system.

ACTION TYPE	**A tilting- or moving-barrel pistol may require an approved recoil-booster/piston system. A fixed barrel generally requires the approved fixed mount or spacer. Never interchange these configurations unless GDM expressly authorizes it.**

6. PRE-INSTALLATION INSPECTION

1. Unload the firearm completely and remove the magazine.
2. Open the action; visually and physically verify the chamber is empty.
3. Inspect barrel threads, shoulder, direct mount, and rear suppressor threads.
4. Remove carbon, chips, burrs, dirt, excess thread compound, and other debris.
5. Verify the suppressor bore is unobstructed.
6. Confirm the mount matches both the host firearm and suppressor.

STOP	**Do not proceed if any component is damaged, obstructed, incompatible, or questionable.**

7. INSTALLATION

Installing the Approved Mounting System

1. Confirm the suppressor is cool and the firearm is unloaded.
2. Verify the selected mount or piston is approved and has the correct host-barrel thread pitch.
3. Inspect and clean all mating threads.
4. Thread the mount into the rear of the suppressor by hand.
5. Confirm smooth engagement and full seating.
6. Secure the mount using the supplied or approved wrench when applicable.
7. Verify the mount is fully seated and secure.

Installing the Suppressor on the Host Firearm

1. Start the approved mount or piston onto clean muzzle threads by hand.
2. Rotate slowly; stop if resistance, binding, or cross-threading is felt.
3. Continue until the suppressor seats fully and squarely against the proper shoulder.
4. Secure firmly and perform a light hand check.
5. Perform a bore-alignment check before firing.

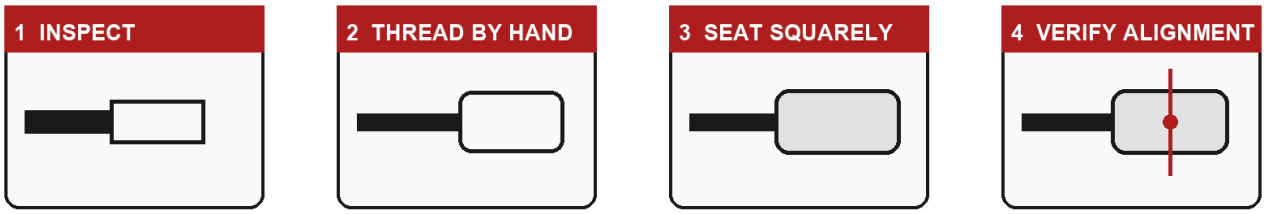

WARNING	**Never fire if the suppressor is partially threaded, loose, improperly seated, or misaligned**

8. BORE ALIGNMENT CHECK

With the firearm unloaded and the suppressor fully installed, insert the correctly sized straight alignment rod through the suppressor and into the barrel bore. Observe clearance at the suppressor exit.

Even clearance around rod

Rod off-center or contacting bore

DO NOT FIRE	**If the rod contacts the suppressor bore or appears significantly off-center, remove the suppressor and inspect the complete mounting system. Contact Guardian Defense Mfg. if alignment remains questionable**

9. FIRST-FIRE PROCEDURE

1. Keep the firearm unloaded until ready to fire.
2. Verify the mount and suppressor are fully seated and secure.
3. Complete the bore-alignment check.
4. Load one round only and fire from a safe position.
5. Unload and inspect the system.
6. Confirm the suppressor and mount remain secure and show no evidence of projectile contact.
7. Inspect the target for abnormal impact behavior.
8. If normal, continue firing while periodically checking mount security.

10. ACCURACY & POINT-OF-IMPACT SHIFT

A repeatable point-of-impact shift may occur when a suppressor is installed. A major, erratic, or changing accuracy loss is not normal.

1. Stop firing and unload the firearm.
2. Verify suppressor and direct-mount tightness.
3. Inspect for projectile contact and perform another alignment check.
4. Verify square seating before resuming fire.

11. MODEL & FIRING GUIDANCE

Model	Heat / firing guidance
GDM® 9Ti	Titanium construction requires deliberate heat management. Avoid prolonged continuous strings and allow adequate natural cooling.
GDM® 9TiK	The compact K configuration may heat more rapidly. Use conservative firing strings and allow additional cooling.
Mounting system	For moving-barrel pistols, use only the approved recoil-booster/piston configuration. Use a fixed-barrel mount or approved spacer only where specified.
HOT SURFACE	**All suppressors can cause severe burns and ignite nearby combustible material. Never cool a hot suppressor by immersing it in water or another liquid.**

12. PERIODIC MOUNT CHECKS

Periodically verify suppressor tightness, direct-mount security, full shoulder seating, and the absence of abnormal movement. If anything loosens: stop firing, unload, cool, correct the condition, and recheck alignment.

13. REMOVAL

Removing the Suppressor from the Firearm

1. Unload the firearm completely.
2. Allow the suppressor to cool naturally.
3. Secure the firearm safely.
4. Rotate the suppressor in the removal direction; use the approved wrench when applicable.
5. Remove it without damaging barrel threads.
6. Inspect barrel and mount threads after removal.

Removing or Changing the Mounting System

1. Confirm the suppressor is completely cool.
2. Secure it using a safe, non-damaging method.
3. Use the supplied or approved mount wrench when applicable.
4. Rotate and remove the mount carefully.
5. Inspect and clean mount and rear suppressor threads before installing another compatible mount.

HOT SURFACE	**Never attempt to remove a dangerously hot suppressor with bare hands.**

14. CLEANING & MAINTENANCE

Do not disassemble welded suppressor components unless specifically authorized by Guardian Defense Mfg.

Routine Maintenance

- After cooling, wipe down the exterior with a clean cloth.
- Inspect the suppressor bore for obstructions.
- Inspect barrel, mount, and rear suppressor threads.
- Remove loose carbon and debris from accessible mounting surfaces.
- Check for impact, erosion, cracking, corrosion, or abnormal wear.
- Store clean and dry in a ventilated location.

Do Not

- Cut open the suppressor or remove welded components.
- Drill, modify, or probe internal components.
- Use aggressive chemicals or cleaning methods that may damage the material or finish.
- Fire with a bore obstruction or continue after a suspected baffle or end-cap strike.

SERVICE	If damage or abnormal wear is suspected, discontinue use and contact Guardian Defense Mfg. before firing again.

15. AMMUNITION & PROJECTILE STABILITY

Use only high-quality ammunition appropriate for the firearm and approved suppressor application. Before suppressor use—especially with a new firearm or ammunition combination—fire the host without the suppressor and inspect the target for clean, stable bullet impacts.

- Do not use ammunition showing unstable projectiles or keyholing.
- Do not use damaged or improperly loaded cartridges.
- Do not use ammunition with suspected bore incompatibility.
- Do not use remanufactured, reloaded, frangible, or specialty ammunition unless specifically approved for the application.

16. TROUBLESHOOTING

Condition	Possible cause	Required action
Will not thread smoothly	Wrong pitch, dirt, burr, damage, cross-threading	Stop. Remove, inspect, clean, and confirm compatibility. Never force threads.
Becomes loose during firing	Insufficient seating, contamination, vibration	Stop firing. Unload, cool, inspect, reinstall, and recheck alignment.
Significant accuracy loss	Loose mount, misalignment, harmonics, projectile contact	Stop firing and inspect the complete system before reuse.
Suspected baffle / end-cap strike	Misalignment, instability, obstruction, loose mount	Stop immediately. Do not continue use. Contact GDM.
Extreme heat / visible glow	Firing schedule exceeded	Stop firing. Keep clear of combustibles and allow natural cooling.

17. WARRANTY & SERVICE

Coordinate warranty evaluation and repair directly through Guardian Defense Mfg. Do not attempt unauthorized structural repair or modification.

When requesting service, provide:

- Suppressor model and serial number
- Host firearm make, model, barrel length, and barrel thread pitch
- Direct mount used
- Ammunition type and approximate round count
- Description of the issue and photographs when applicable

DO NOT FIRE	**Visible contact, cracking, deformation, an obstructed bore, or persistent alignment doubt requires immediate discontinuation of use.**

18. FINAL PRE-FIRE CHECKLIST

- ☐ Firearm, cartridge, barrel length, and suppressor model are compatible
- ☐ Correct GDM direct mount is installed
- ☐ Direct mount is fully seated and secure in the suppressor
- ☐ No crush washer is present
- ☐ Barrel threads and shoulder are clean and undamaged
- ☐ Suppressor is fully installed and secure on the firearm
- ☐ Bore is unobstructed
- ☐ Alignment has been verified
- ☐ Projectile stability has been confirmed
- ☐ Eye and hearing protection are in use
- ☐ Safe firing direction and backstop are confirmed

DO NOT FIRE	**If any item cannot be confirmed, do not fire.**

GUARDIAN DEFENSE MFG.

GDM® — Silent Defense. Loud Impact.®

For technical support, warranty evaluation, mounting assistance, replacement components, or service questions, contact Guardian Defense Mfg.

Made in the USA

DOCUMENT CONTROL

Document	Details
Document	GDM® 9 Series Owner's, Mounting & Operating Instructions
Models	GDM® 9Ti • GDM® 9TiK
Mounting	Direct Mount / Approved Piston System
Revision	Draft Rev. A
Effective Date	July 2026

NOTICE: Guardian Defense Mfg. reserves the right to revise product specifications, approved cartridges, barrel-length requirements, direct mounts, accessories, firing schedules, and instructions as product designs evolve.